

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



09319-12047
SUSPENSION BUSHING



11220-62J22
ENGINE MOUNTING



11220-8H300
ENGINE MOUNTING



11350-ED800
ENGINE MOUNTING



11610-65D00
ENGINE MOUNTING



12309-0H041
ENGINE MOUNTING



12309-0H070
TORQUE ROD MOUNT, UPPER-AT



12361-64380
ENGINE MOUNTING



12363-0A120
ENGINE MOUNTING



12371-20030 BU
ENGINE BUSH SUPPORT



12371-62060 BU
ENGINE BUSH SUPPORT



37230-0K020
CENTER BEARING

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



44200-44140/44200-44240
STEERING GEAR BUSHING



48609-0D060
SHOCK ABS. WITH BEARING



48609-12420
SHOCK ABS. BEARING



48609-20401
SHOCK ABS. MOUNTING



48620-30290/48640-30290
LOWER ARM BUSHING, FR(SMALL)



48620-50070
SUSPENSION BUSHING, LOWER ARM



48720-28070/28071/28H00
SUSPENSION BUSHING, RE (SMALL)



48720-28070-28071-28H00
SUSPENSION BUHSING, RE (BIG)



48750-06040
SHOCK ABS, MOUNTIG, (RH)



48760-06040
SHOCK ABS. MOUNTING (LH)



54320-50Y12
SHOCK ABS, MOUNTING



54320-ED001
SHOCK ABS. MOUNTING

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



54320-JA00A
SHOCK ABS. MOUNTING



54320-W1000
SHOCK ABS. MOUNTING



54321-W1000
SHOCK ABS. MOUNTING



54500-CX000 RH / 54501-CA000 LH
LOWER ARM ASSY (SETS)



54570-8H300 (COMP)
LOWER ARM BUSHING ASSY



8-94328-799-0
CENTER BEARING



B25D-34-390
SHOCK ABS. MOUNTING



BP4K-34-380
SHOCK ABS. MOUNTING



BRYO-28-910 ALUMINIUM
SHOCK ABS. MOUNTING, RE



BRYO-28-910 BU
REAR SHOCK ABS. BUSHING



MB-007023
ENGINE MOUNTING



MR-131420
SHOCK ABS. BEARING

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



MR-491557
ENGINE MOUNTING



MR-510056
ENGINE MOUNTING



MR-554246
SHOCK ABS. BEARING