

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com info@sumarauto.com

Like us on:  Sumar Auto Spare Parts Trading llc

S/N	Part No	Description
1	48710-48050-BFS	LOW ARM BUSH
2	54320-JA00A-BFS	SHOCK ABS MOUNTING (FR,RH,LH)
3	48609-87403-BFS	SHOCK ABSORBER MOUNTING (FR)
4	54321-ED500LH-BFS	SHOCK ABS MOUNTING (FR,LH)
5	54320-ED500RH-BFS	SHOCK ABS MOUNTING (FR,RH)
6	50830-SDA-A02-BFS	ENGINE MOUNTING
7	50810-SDA-A02-BFS	ENGINE MOUNTING (RE,A/M)
8	50805-S5A-013-BFS	INSULATOR ENGINE (RH,A/M)
9	50820-SVA-A05-BFS	INESULATOR ENGINE (FR)
10	50850-TS6-H81-BFS	ENGINE MOUNTING
11	50850-TR0-A01-BFS	ENGINE MOUNTING
12	50830-T0T-H81-BFS	ENGINE MOUNTING
13	50890-TS6-H02-BFS	ENGINE MOUNTING
14	50820-T0C-003-BFS	ENGINE MOUNTING
15	50880-T0A-A81-BFS	ENGINE MOUNTING
16	50820-T0T-H01-BFS	ENGINE MOUNTING
17	12371-0D060-BFS	INSULATOR ENGINE (RE)
18	50850-T0C-003-BFS	ENGINE MOUNTING
19	50810-TK8-A01-BFS	ENGINE MOUNTING
20	50830-TK8-A01-BFS	ENGINE MOUNTING
21	54524-1CA0A-BFS	UP ARM BUSH
22	54468-AC70A-BFS	LOW ARM BUSH
23	46201-65D50-BFS	LOW ARM BUSH
24	27550-52D00-BFS	DIFFERENTIAL BUSH
25	52088217-BFS	LOW ARM BUSH (BIG)
26	BP4S-39-040-BFS	INSULATOR ENGINE
27	DG81-39-060-BFS	ENGINE MOUNTING (RH)
28	BP4S-39-060-BFS	INSULATOR ENGINE (WITH OIL)
29	GJ27-39-060-BFS	ENGINE MOUNTING (RH ,TOP)
30	42305-51010-BFS	SUSPENSION BUSH
31	D651-34-156-BFS	STABILIZER SHAFT RUBBER
32	48815-B4030-BFS	STABILIZER SHAFT RUBBER (FR)
33	52306-SZA-A01-BFS	STABILIZER SHAFT RUBBER
34	54500-1BA3A-BFS	LOW ARM BUSH (FR,SMAIL)
35	55110-CG000-BFS	LOW ARM BUSH
36	54721-EA300-BFS	SUSPENSION BUSH
37	46911-65J00-BFS	BODY BUSHING
38	48620-59015-BFS	LOW ARM BUSH

39	51920-SWA-A01-BFS	SHOCK ABS MOUNTING (FR,LH,RH)
40	48068-12290-BFS	CONTROL ARM
41	48069-12290-BFS	CONTROL ARM
42	48068-33060-BFS	CONTROL ARM
43	48069-33060-BFS	CONTROL ARM
44	48068-05080-BFS	CONTROL ARM
45	48069-05080-BFS	CONTROL ARM
46	54501-1HM0B-BFS	CONTROL ARM
47	54500-1HM0B-BFS	CONTROL ARM
48	GM15854941-BFS	ENGINE MOUNTING (FR,RH,LH)
49	11210-JD21A-BFS	ENGINE MOUNTING (RH)
50	11270-2Y000-BFS	ENGINE MOUNTING A33 SENSOR
51	11320-2Y000-BFS	ENGINE MOUNTING (RE,A/T) Sensor
52	11270-40U02-BFS	INSULATOR ENGINE (FR)
53	11320-40U00-BFS	INSULATOR ENGINE (RE)
54	11210-JN30A-BFS	ENGINE MOUNTING (A/M)
55	11220-JE20A-BFS	ENGINE MOUNTING
56	11210-ET80A-BFS	ENGINE MOUNTING
57	48702-52060-BFS	SUSPENSION BUSH
58	48674-50030-BFS	STURT BAR MOUNTING
59	54320-1KA0B-BFS	SHOCK ABS MOUNTING
60	54321-1KA0B-BFS	SHOCK ABS MOUNTING