

# SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com      info@sumarauto.com

Like us on:  Sumar Auto Spare Parts Trading llc

S/N	Part No	Description
1	12361-54140-JP	ENGINE MOUNTING
2	54320-2W100-JP	SHOCK ABS MOUNTING (FR)
3	51306-S5A-003-JP	STABILIZER SHAFT RUBBER (FR)
4	52306-S84-A01-JP	STABILIZER SHAFT RUBBER (RE)
5	12362-02050-JP	INSULATOR ENGINE (RH,M/T)
6	48609-12420-JP	SHOCK ABS MOUNTING (FR)
7	55045-06J00-JP	SPRING SHACKLE BUSH
8	50850-SDA-A00-JP	ENGINE MOUNTING (FR)
9	MR455018-JP	SHOCK ABSORBER MOUNTING (FR)
10	48725-12460-JP	SUSPENSION BUSH (BIG)
11	16533-15120-JP	SUPPORT RADIATOR UPPER
12	MR151375-JP	ENGINE MOUNTING
13	48609-BZ010-JP	SHOCK ABSORBER MOUNTING (FR)
14	12361-0D030-JP	INSULATOR ENGINE (FR)
15	B455-34-380D-JP	SHOCK ABS MOUNTING (FR)
16	50841-SR3-030-JP	ENGINE MOUNTING (FR,RH,A/M)+2
17	55045-0W023-JP	SUSPENSION BUSH
18	12361-35050-JP	ENGINE MOUNTING (FR)
19	54320-0W000-JP	SHOCK ABS MOUNTING (FR)
20	50842-SR3-984-JP	INSULATOR ENGINE
21	54590-0W001-JP	LOW ARM BUSHING
22	54320-4Y000-JP	SHOCK ABS MOUNTING (FR)
23	B01C-34-380-JP	SHOCK ABS MOUNTING (FR)
24	48609-12190-JP	SHOCK ABS MOUNTING
25	50860-SDA-A02-JP	ENGINE MOUNTING (RE)
26	54542-2S610-JP	UP ARM BUSHING
27	MB870262-JP	ENGINE BUSHING
28	54590-01E00-JP	LOW ARM BUSHING
29	54542-EB70A-JP	UP ARM BUSHING
30	12371-0M020/IE-JP	INSULATOR ENGINE (LH,A/M)
31	50870-SDA-A02-JP	INSULATOR ENGINE (LH,A/M)
32	55045-2Y013-JP	SUSPENSION BUSH
33	11220-2S710-JP	ENGINE MOUNTING (RH)
34	11210-2S710-JP	ENGINE MOUNTING (LH)
35	SA12-25-300-JP	CENTER BEARING
36	12361-0D040-JP	INSULATOR ENGINE (FR)
37	48609-35030-JP	SHOCK ABS MOUNTING (FR,LH,RH)
38	48609-32100-JP	SHOCK ABS MOUNTING (FR)
39	40520-S10-003-JP	CENTER BEARING