

# SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com      info@sumarauto.com

Like us on:  Sumar Auto Spare Parts Trading llc

S/N	Part No	Description
1	11220-ED000-BFS	ENGINE MOUNTING (LH)
2	42304-30090-BFS	SUSPENSION BUSH (RUBBER
3	48654-30280-BFS	LOW ARM BUSH
4	54524-AL500-BFS	UP ARM BUSH
5	46201-65D50-BFS	LOW ARM BUSH
6	52306-SCV-000-BFS	STABILEZER SHAFT RUBBER (RE)
7	51306-STX-A12-BFS	STABILIZER SHAFT RUBBER (FR)
8	52380-32010-BFS	SUSPENSION BUSH
9	48710-97402RB-BFS	SUSPENSION BUSH
10	54584-2B000-BFS	LOW ARM BUSH (FR,BIG)
11	48740-60070-BFS	SUSPENSION BUSH
12	MN161705-BFS	LOW ARM BUSH (SMALL)
13	53685-S0A-J00-BFS	STEERING GEAR BUSH
14	42305-20240-BFS	SUSPENSION BUSH
15	MN101372-BFS	SHOCK ABS MOUNTING (FR)
16	48609-42012-BFS	SHOCK ABS MOUNTING (FR)
17	MR455018-BFS	SHOCK ABS MOUNTING
18	48674-50030-BFS	STURT BAR MOUNTING
19	11210-JN30A-BFS	ENGINE MOUNTING (A/M) with oil
20	48609-06170-BFS	SHOCK ABS MOUNTING (FR)
21	48725-50095-BFS	SUSPENSION BUSH
22	GJ6A-39-060-BFS	INSULATOR ENGINE
23	51920-SNA-023-BFS	SHOCK ABS MOUNTING (FR)+1
24	54321-ED500LH-BFS	SHOCK ABS MOUNTING (FR,LH)
25	54320-ED500RH-BFS	SHOCK ABS MOUNTING (FR,RH)
26	54320-JG01B-BFS	SHOCK ABS MOUNTING (FR,RH)
27	54321-JG01B-BFS	SHOCK ABS MOUNTING (FR,LH)
28	BP4S-39-060-BFS	INSULATOR ENGINE (WITH OIL)
29	54320-JA00A-BFS	SHOCK ABS MOUNTING (FR,RH,LH)
30	DG81-39-060-BFS	ENGINE MOUNTING (RH)
31	BP4S-39-040-BFS	INSULATOR ENGINE
32	48603-33020-BFS	SHOCK ABS MOUNTING (FR,RH)
33	48609-06081-BFS	SHOCK ABS MOUNTING (FR,LH)+2