

# SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com      info@sumarauto.com



Sumar Auto Spare Parts Trading llc

S/N	Part No	Description
1	50810-SDA-A02-BFS	ENGINE MOUNTING (RE,A/M)
2	GJ6A-39-040-BFS	INSULATOR ENGINE
3	GJ6A-39-070-BFS	ENGINE MOUNTING
4	GJ6A-39-060-BFS	INSULATOR ENGINE
5	12305-21320-BFS	INSULATOR ENGINE (RH)
6	GM15854941-BFS	ENGINE MOUNTING (FR,RH,LH)
7	48068-30290-BFS	Low Arm Bushing (SMALL )
8	MR510056-BFS	ENGINE MOUNTING (FR,LH,RH)
9	12363-0V080-BFS	ENGINE MOUNTING+1
10	48610-59125-BFS	UP ARM BUSH (FR)LS460
11	52380-26081-BFS	DIFFERENTIAL BUSH
12	54500-1AA0A-S-BFS	LOW ARM BUSHING (SMALL )
13	50810-TA1-A01-BFS	ENGINE MOUNTING (RE)
14	54730-WL000-BFS	Differential mounting BUSH FR +1
15	46371-65J00-BFS	LOW ARM BUSH
16	54400-8H500S-BFS	REAR BODY BUSH+1
17	EG25-28-68XA-BFS	SUSPENSION BUSH differential Cx7
18	52380-28030-BFS	DIFFERENTIAL BUSH+1
19	51391-S5A-024-BFS	LOW ARM BUSHING (BIG)+1
20	52380-26081-BFS	DIFFERENTIAL BUSH
21	54500-1BA3B-BFS	LOW ARM BUSH (FR,BIG)
22	48745-87602-BFS	SUSPENSION BUSH+3
23	51393-S0X-A02-BFS	LOW ARM BUSH (BIG)+1
24	BET258 BYD-BFS	ENGINE BUSH
25	90919-11007-BFS	IGNITION COIL
26	48620-50070B-BFS	LOW ARM BUSHING CENTER (BIG) LS460
27	3770A015-BFS	SUSPENSION BUSH
28	55419-8H501-BFS	SUSPENSION BUSH
29	DF71-34-156-BFS	STABILIZER SHAFT RUBBER (FR)
30	50820-SWE-T51-BFS	ENGINE MOUNTING (RH,A/M)
31	11350-JA000-BFS	ENGINE MOUNTING (TOP,FR)+2
32	48740-60150-BFS	Suspension Bush Re
33	90389-14042-BFS	SPRING SHACKLE BUSH
34	48725-50090-BFS	SUSPENSION BUSH (RE,BIG)LS400
35	51392-S0X-A01-BFS	LOW ARM BUSH (SMALL)
36	51360-SAA-E01-BFS	LOW ARM (LH)
37	51350-SAA-E01-BFS	LOW ARM (RH)
38	51360-S5A-A03-BFS	LOW ARM (LH)
39	51350-S5A-A03-BFS	LOW ARM (RH)
40	51360-SDA-A03-BFS	LOW ARM (FR,LH)
41	51350-SDA-A03-BFS	LOW ARM (FR,RH)

42	54501-JN00B-BFS	CONTROL ARM (FR,LH)
43	54500-JN00A-BFS	CONTROL ARM (FR,LH)
44	51460-SFE-003-BFS	CONTROL ARM (UP,LH)
45	51450-SFE-003-BFS	CONTROL ARM (UP,RH)
46	51520-TA0-003-BFS	UPPER FRONT ARM (LH)
47	51510-TA0-003-BFS	UPPER FRONT ARM (RH)
48	51460-S84-A01-BFS	UP ARM (LH)
49	51450-S84-A01-BFS	UP ARM (RH)
50	90389-22003-BFS	SPRING SHACKLE BUSH (RE)
51	48702-60140-BFS	SUSPENSION BUSH
52	56210-CB025-BFS	SHOCK ABS BUSHING (RE)
53	48725-50170-BFS	SUSPENSION BUSH
54	48068-79015-BFS	LOW ARM BUSHING (BIG )
55	90389-14056-BFS	SUSPENSION BUSH
56	S10H-28-650(121)-BFS	SUSPENSION BUSH
57	48770-59015-BFS	UP ARM BUSHING