

# SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com      info@sumarauto.com



Sumar Auto Spare Parts Trading llc

S/N	Part No	Description
1	48820-50020-BFS	LINK ASSY (FR ) LS430
2	4056A133-BFS	LINK ASSY (FR,LH)
3	4056A134-BFS	LINK ASSY (FR,RH)
4	48802-60060-SAS	LINK ASSY (RE,LH,RH)
5	48802-60050-SAS	LINK ASSY (FR,LH,RH)
6	BP4K-34-170D-BFS	LINK ASSY (FR )
7	48830-60010-BFS	LINK ASSY
8	48810-08010-BFS	LINK ASSY (FR,RH)
9	48820-08010-BFS	LINK ASSY (FR,LH)
10	48820-08020-BFS	LINK ASSY (FR,LH,RH)
11	48820-47010-BFS	LINK ASSY (FR )
12	48820-28050-BFS	LINK ASSY (FR )
13	48820-20040-BFS	LINK ASSY (FR,RH)
14	48810-20020-BFS	LINK ASSY (FR,RH)
15	48820-02080-BFS	LINK ASSY (FR )
16	48830-42021-BFS	LINK ASSY (RE)
17	48830-33010-BFS	LINK ASSY (RE)
18	B30H-28-170-BFS	LINK ASSY (RE)
19	48820-60032-BFS	LINK ASSY (FR)
20	48820-0K010-BFS	LINK ASSY (FR )
21	48820-35030-BFS	LINK ASSY (FR )
22	54617-CG000-BFS	LINK ASSY (FR )
23	48830-48010-BFS	LINK ASSY (RE)
24	48820-33020-BFS	LINK ASSY (FR,RH)
25	48810-33010-BFS	LINK ASSY (FR,LH)
26	54840-1G000-SAS	LINK ASSY (FR,RH)
27	54830-1G000-SAS	LINK ASSY (FR,LH)
28	48820-52030-BFS	LINK ASSY (FR )
29	54668-JA000-BFS	LINK ASSY (FR,LH)
30	54618-ED000MTL-BFS	LINK ASSY (FR ) IRON
31	48820-42020-BFS	LINK ASSY (FR,LH)
32	BP4K-28-170D-BFS	LINK ASSY (RE)
33	MR992310-BFS	LINK ASSY (FR,RH)
34	MR992309-BFS	LINK ASSY (FR,LH)
35	MR374522-BFS	LINK ASSY (FR,RH)
36	MR374521-BFS	LINK ASSY (FR,LH)
37	E181-34-150-BFS	LINK ASSY (FR,RH)
38	52325-S3V-013-BFS	LINK ASSY (RE,LH)
39	52321-SCV-A00-BFS	LINK ASSY (RE,LH)
40	52320-SCV-A00-BFS	LINK ASSY (RE,RH)
41	46630-80F00-BFS	LINK ASSY (RE,RH)

42	46640-80F00-BFS	LINK ASSY (RE,LH)
43	MR418053-BFS	LINK ASSY (RE,RH)
44	MR316435-BFS	LINK ASSY (FR,RH)
45	MR316436-BFS	LINK ASSY (FR,LH)
46	MR589437-BFS	LINK ASSY (FR,LH,RH)
47	MR319147-BFS	LINK ASSY (FR)
48	54618-50Y00-BFS	LINK ASSY (FR )
49	56260-0W001-BFS	LINK ASSY (RE)
50	54618-4N010-BFS	LINK ASSY (FR,LH)
51	54668-4N010-BFS	LINK ASSY (RE,LH)
52	54618-1AA0A-BFS	LINK ASSY (FR,RH)
53	54668-1AA0A-BFS	Link Assy T31,J32,Z51 FR LH
54	56261-EQ000-BFS	LINK ASSY (RE,LH,RH)
55	54668-EA010-SAS	LINK ASSY (FR,LH)
56	54618-EB71A-BFS	LINK ASSY (FR,RH)
57	54618-VB000-BFS	LINK ASSY (FR )
58	42420-65J00-BFS	LINK ASSY (FR,LH,RH)
59	48810-28020-BFS	LINK ASSY (FR,LH)
60	48820-28030-BFS	LINK ASSY (FR,RH)
61	48830-60010-BFS	LINK ASSY
62	48830-30020-BFS	LINK ASSY (RE)
63	48820-47010-BFS	LINK ASSY (FR )
64	48820-42010-BFS	LINK ASSY (FR)
65	48820-22041-BFS	LINK ASSY (FR)
66	48820-30020-SAS	LINK ASSY (FR,LH)
67	48810-22011-BFS	LINK ASSY (FR,LH)
68	48810-30010-BFS	LINK ASSY (FR,LH)GS300
69	48820-22011-BFS	LINK ASSY (FR,RH)
70	48820-30030-BFS	LINK ASSY (FR,RH)-GS300
71	48820-08010-BFS	LINK ASSY (FR,LH)
72	48810-08010-BFS	LINK ASSY (FR,RH)
73	48830-21020-BFS	LINK ASSY (RE,RH)
74	48840-21010-BFS	LINK ASSY (RE,LH)
75	4895483AB-BFS	LINK ASSY (FR,RH)
76	4895482AB-BFS	LINK ASSY (FR,LH)
77	T001-28-170-BFS	LINK ASSY
78	MR272116-BFS	LINK ASSY
79	MR316369-BFS	LINK ASSY (FR,LH)
80	MR316368-BFS	LINK ASSY (FR,RH)
81	48810-60040-BFS	LINK ASSY (FR,LH)
82	56261-EA500-BFS	LINK ASSY (RE,LH)
83	56261-EA510-BFS	LINK ASSY (RE,RH)
84	51321-SAA-003-BFS	LINK ASSY (FR,RH)
85	48820-0D030-BFS	LINK ASSY (FR )
86	GA2A-34-170A-BFS	LINK ASSY (FR,LH)
87	54618-0E000-BFS	LINK ASSY (FR)
88	48820-30010-BFS	LINK ASSY (FR,RH)
89	54618-2Y000-BFS	LINK ASSY (FR,RH)

90	51320-S04-003-BFS	LINK ASSY (FR,LH,RH)
91	GA2A-34-150A-BFS	LINK ASSY (FR,RH)
92	48840-42010-BFS	LINK ASSY (RE,LH)
93	E181-34-170-BFS	LINK ASSY (FR,LH)
94	48820-0K030-BFS	LINK ASSY (FR,RH)
95	96403100-BFS	LINK ASSY (FR,RH)
96	96403099-BFS	LINK ASSY (FR LH)
97	54830-2H100-BFS	LINK ASSY (FR)
98	MR954887-BFS	STABILIZER LINK (FR,LH,RH)+1
99	48820-06070-BFS	LINK ASSY (FR)
100	MN101368-BFS	LINK ASSY (FR )
101	UC7C-34-150-BFS	LINK ASSY (FR,RH)
102	UC7C-34-170-BFS	LINK ASSY (FR LH)
103	54618-ED000-BFS	LINK ASSY (FR )iron
104	350614-BFS	LINK ASSY (FR )