

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



Sumar Auto Spare Parts Trading Ilc

S/N	Part No	Description
1	BP4K-39-060-BFS	INSULATOR ENGINE (WITH OIL)
2	54320-4M400-BFS	SHOCK ABSORBER MOUNTING
3	BP4S-39-070-BFS	INSULATOR ENGINE (LH)
4	BP4S-39-060-BFS	INSULATOR ENGINE (WITH OIL)
5	54325-ED00A-BFS	SHOCK ABS BEARING (FR)
6	G15C-39-060-BFS	ENGINE MOUNTING (RH)
7	11210-ED800-BFS	INSULATOR ENGINE (RH)
8	BBP3-39-070-BFS	ENGINE MOUNTING
9	MR403666-BFS	ENGINE MOUNTING (RH)
10	MR554541-BFS	ENGINE BUSHING (RE,A/T)
11	B25D-39-06YC-BFS	INSULATOR ENGINE (RH)
12	MR403670-BFS	INSULATOR ENGINE (LH,A/T)+1
13	MR244886-BFS	ENGINE MOUNTING
14	MR333578-SAS	INSULATOR ENGINE (FR,A/T)(MB309486-SAME)
15	MR554013-BFS	ENGINE MOUNTING (LH)+1
16	MN101441-BFS	INSULATOR ENGINE (RH A/T)+1
17	MN101574-BFS	INSULATOR ENGINE (LH,A/T)+3
18	MN101572-BFS	INSULATOR ENGINE (RE,A/T)+4
19	GJ6A-39-040-BFS	INSULATOR ENGINE
20	G33E-39-040-BFS	ENGINE MOUNTING (FR)+1
21	GE6T-39-050-BFS	INSULATOR ENGINE (FR,A/M)+2
22	UB39-39-040A-BFS	FRONT ENGINE MOUNTING
23	B455-39-050B-BFS	INSULATOR ENGINE (FR)
24	GE4T-39-050A-BFS	INSULATOR ENGINE (FR,A/M)+1
25	GA2A-39-050/IE-BFS	INSULATOR ENGINE (FR,M/T)USED+1
26	BR74-39-040-BFS	INSULATOR ENGINE (RE)
27	GA2G-39-100-BFS	REAR ENGINE MOUNTING (A/T)+1
28	3975-39-040C-BFS	ENGINE MOUNTING (RE)
29	B455-39-060/IE-BFS	INSULATOR ENGINE (RH)
30	B25G-39-040D-BFS	INSULATOR ENGINE (RE)+1
31	B25D-39-040B-BFS	INSULATOR ENGINE (RE)+1
32	GA2A-39-060-BFS	INSULATOR ENGINE (RH,A/M)+1
33	B25E-39-070C-SAS	INSULATOR ENGINE (LH)
34	GJ6A-39-070-BFS	ENGINE MOUNTING
35	B25D-39-070C-BFS	INSULATOR ENGINE (LH)
36	B455-39-100E-BFS	INSULATOR ENGINE (LH)
37	GJ6G-39-060-BFS	INSULATOR ENGINE (WITH OIL)
38	11320-4M400-SAS	ENGINE MOUNTING (RE,A/M)
39	11210-6N000-BFS	INSULATOR ENGINE (WITH SCREW SET)+1
40	11210-ED50A-BFS	INSULATOR ENGINE (RH)
41	11360-ED000(BR)-BFS	Engine Mounting TIIDA LATIO C11 1.6,1.8 RE
42	11270-4M400-SAS	INSULATOR ENGINE (FR,A/M)
43	B38M-39-060-BFS	ENGINE MOUNTING (FR)
44	MR297932-BFS	SHOCK ABS BEARING (FR)
45	MR272946-BFS	STRUT MOUNTING BEARING+1

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



Sumar Auto Spare Parts Trading llc

46	BP4K-34-38XA-BFS	SHOCK ABS BEARING+1
47	BP4K-34-380-BFS	SHOCK ABS MOUNTING (FR)+1
48	54321-ED500LH-BFS	SHOCK ABS MOUNTING (FR,LH)
49	54320-ED500RH-BFS	SHOCK ABS MOUNTING (FR,RH)
50	MN101372-BFS	SHOCK ABS MOUNTING (FR)
51	MR455018-BFS	SHOCK ABS MOUNTING
52	MR554860-BFS	SHOCK ABS MOUNTING (FR)
53	GJ6A-28-156-BFS	STABILIZER SHAFT RUBBER (RE)+1
54	GA2A-34-46YE(BR)-BFS	LOW ARM BUSHING (BRACKET,LH)
55	GA2A-34-46XE(BR)-BFS	LOW ARM BUSHING (BRACKET,RH)
56	B455-34-46YA (BR)-BFS	LOW ARM BUSHING (LH,BRACKET)+1
57	B455-34-46XA (BR)-BFS	LOW ARM BUSHING (RH,BRACKET)+2
58	P030-25-310C-BFS	CENTER BEARING
59	B25D-28-111-BFS	SHOCK ABSORBER BUMPER (RE)+2
60	21810-2E000-BFS	ENGINE MOUNTING (RH,A/M)
61	11210-JN30A-BFS	ENGINE MOUNTING (A/M) with oil
62	DG81-39-060-BFS	ENGINE MOUNTING (RH)
63	BP4K-39-060-BFS	INSULATOR ENGINE (WITH OIL)
64	B25D-39-06YC-BFS	INSULATOR ENGINE (RH)
65	BP4S-39-070-BFS	INSULATOR ENGINE (LH)
66	21810-2E000-BFS	ENGINE MOUNTING (RH,A/M)
67	BP4S-39-060-BFS	INSULATOR ENGINE (WITH OIL)
68	BBP3-39-070-BFS	ENGINE MOUNTING
69	G15C-39-060-BFS	ENGINE MOUNTING (RH)
70	12305-28120-BFS	ENGINE MOUNTING (RH)+1
71	D350-39-060-BFS	ENGINE MOUNTING (RH)with Br
72	68110950AB-BFS	ENGINE MOUNTING
73	21830-2E000-BFS	INSULATOR ENGINE
74	21810-2Z000-BFS	INSULATOR ENGINE
75	21810-2S000-BFS	INSULATOR ENGINE
76	21810-4T000-BFS	INSULATOR ENGINE
77	21910-2E501-BFS	INSULATOR ENGINE
78	21910-2E100-BFS	INSULATOR ENGINE
79	21910-2H000-BFS	INSULATOR ENGINE (FR)
80	21910-1G000-BFS	INSULATOR ENGINE
81	21910-2D000-BFS	INSULATOR ENGINE
82	21910-2E300-BFS	INSULATOR ENGINE
83	21930-2B600-BFS	INSULATOR ENGINE
84	21830-1E100-BFS	INSULATOR ENGINE
85	21810-1E000-BFS	INSULATOR ENGINE
86	21950-1R000-BFS	ENGINE MOUNTING
87	21930-2E100-BFS	INSULATOR ENGINE
88	CB01-34-380B-BFS	SHOCK ABS MOUNTING (FR)
89	54630-3K000-BFS	SHOCK ABSORBER MOUNTING
90	54610-2E200-BFS	SHOCK ABS MOUNTING
91	54611-2D000-BFS	SHOCK ABS MOUNTING

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



Sumar Auto Spare Parts Trading llc

92	54610-2F000-BFS	SHOCK ABS MOUNTING
93	55330-2H000-BFS	SHOCK ABSORBER MOUNTING
94	54611-1J000-BFS	SHOCK ABS MOUNTING
95	55310-22000-BFS	SHOCK ABS MOUNTING
96	54610-2S100-BFS	SHOCK ABS MOUNTING
97	54610-2H000-BFS	SHOCK ABS MOUNTING
98	48815-02110-BFS	STABILIZER SHAFT RUBBER (FR)+1
99	51306-T2A-A01-BFS	Stabilizer Shaft Rubber (Fr)AC 13
100	51306-TF0-003-BFS	STABILIZER SHAFT RUBBER (FR)+1
101	51306-T4N-H02-BFS	STABILIZER SHAFT RUBBER (FR)
102	48815-50200-BFS	STABILIZER SHAFT RUBBER
103	51306-T6A-J01-BFS	STABILIZER SHAFT RUBBER (FR)
104	48818-05080-BFS	STABILIZER SHAFT RUBBER (RE) D20
105	51306-T7J-H01-BFS	STABILIZER SHAFT RUBBER (FR)
106	51307-T7J-H01-BFS	STABILIZER SHAFT RUBBER (FR)+1
107	48815-0K010-BFS	STABILIZER SHAFT RUBBER (FR)+1
108	54613-ED501-BFS	STABILIZER SHAFT RUBBER (FR)+1
109	52306-SFE-004-BFS	STABILIZER SHAFT RUBBER (RE)
110	55470-EB300-BFS	DIFFERENTIAL BUSH
111	55476-EB30A-BFS	DIFFERENTIAL BUSH
112	3770A015-BFS	SUSPENSION BUSH
113	48068-30290-BFS	Low Arm Bushing (SMALL)
114	48725-50170-BFS	SUSPENSION BUSH
115	48770-59015-BFS	UP ARM BUSHING
116	41651-50100-BFS	DIFFERENTIAL BUSH
117	CC43-28-910-BFS	SHOCK ABS BUSH (RE)
118	46371-65J00-BFS	LOW ARM BUSH
119	L206-28-300B-BFS	SUSPENSION BUSH
120	51391-TA0-A01-BFS	LOW ARM BUSH (BIG)+1
121	48655-12170-BFS	LOW ARM BUSHING (BIG)+1
122	54560-ED500-BFS	LOW ARM BUSHING (SMALL)+2
123	54570-1HJ0A-BFS	LOW ARM BUSHING (BIG)+1
124	51391-SDA-A03-BFS	LOW ARM BUSHING (BIG)+1
125	52370-SWA-A01-BFS	SUSPENSION BUSH CRV 07-12
126	54560-1HM0A-BFS	LOW ARM BUSHING (SMALL)+2
127	48790-42020-BFS	SUSPENSION BUSH (RE)+1
128	48710-35050-BFS	SUSPENSION ARM
129	54500-1AA0A-S-BFS	LOW ARM BUSHING (SMALL)
130	48620-50070B-BFS	LOW ARM BUSHING CENTER (BIG) LS460
131	48610-59125-BFS	UP ARM BUSH (FR)LS460
132	48654-50055-BFS	LOW ARM BUSH (FR,SMALL)SET+2
133	52380-26081-BFS	DIFFERENTIAL BUSH
134	KIT SET LS460-BFS	ARM BUSHING (KET) LS460
135	EG25-28-68XA-BFS	SUSPENSION BUSH differential Cx7
136	21830-2E200-BFS	INSULATOR ENGINE
137	21830-2H010-BFS	ENGINE MOUNTING

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



Sumar Auto Spare Parts Trading llc

138	21830-1G000-BFS	ENGINE MOUNTING
139	21830-2D050-BFS	INSULATOR ENGINE
140	21830-1R200-BFS	INSULATOR ENGINE
141	21930-3S050-BFS	INSULATOR ENGINE
142	21830-2Z000-BFS	ENGINE MOUNTING
143	21950-2Z000-BFS	ENGINE MOUNTING
144	21930-2F110-BFS	INSULATOR ENGINE
145	21930-1G100-BFS	INSULATOR ENGINE
146	B25D-39-050C/IE-SAS	INSULATOR ENGINE (FR)
147	54613-JE23B-BFS	STABILEZER SHAFT RUBBER (FR)