

# SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



Sumar Auto Spare Parts Trading llc

S/N	Part No	Description
1	12362-22090-JP	INSULATOR ENGINE (RH,A/T)
2	48609-28040-JP	SHOCK ABS MOUNTING (FR,LH,RH)
3	56115-EB70A-JP	SHOCK ABSORBER MOUNTING+1
4	37521-57G26-JP	CENTER BEARING
5	48609-12420-JP	SHOCK ABS MOUNTING (FR)
6	54320-CA002-JP	SHOCK ABS MOUNTING (FR)
7	34560-0M000-JP	REAR ENGINE MOUNTING
8	54321-ED001-JP	SHOCK ABS MOUNTING (FR,LH)
9	54320-JN01A-JP	SHOCK ABS MOUNTING (FR)+1
10	54320-ED001-JP	SHOCK ABS MOUNTING (FR,RH)
11	48341-0K010-JP	BUMPER BOUND
12	MB111253-JP	BUMPER BOUND (RE)
13	48725-12560-JP	SUSPENSION BUSH (LH,RH)
14	55320-9N00A-JP	SHOCK ABS MOUNTING (RE)
15	48609-12330-JP	SHOCK ABSORBER MOUNTING (FR)
16	50805-SAA-982-JP	INSULATOR ENGINE (LH,A/T)
17	51925-S5H-T03-JP	SHOCK ABSORBER MOUNTING
18	12305-0D130B-JP	ENGINE BUSHING (RH) WITH OIL
19	48609-0D080-JP	SHOCK ABSORBER MOUNTING
20	40520-S10-003-JP	CENTER BEARING
21	51920-S5H-T03-JP	SHOCK ABS MOUNTING
22	54320-JA00A-JP	SHOCK ABS MOUNTING (FR,RH,LH)
23	54320-1HJ0A-JP	SHOCK ABSORBER MOUNTING (FR)