

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



Sumar Auto Spare Parts Trading llc

S/N	Part No	Description
1	B32H-34-300-BFS	CONTROL ARM (FR,RH)
2	B32H-34-350-BFS	CONTROL ARM (FR,LH)
3	54500-1HM0B-BFS	CONTROL ARM
4	54501-1HM0B-BFS	CONTROL ARM
5	48068-30290-BFS	Low Arm Bushing (SMALL)
6	BCM4-39-060-BFS	ENGINE MOUNTING (RH)
7	BBP3-39-070-BFS	ENGINE MOUNTING
8	11210-JN30A-BFS	ENGINE MOUNTING (A/M) with oil
9	D350-39-060-BFS	ENGINE MOUNTING (RH)with Br
10	52380-26081-BFS	DIFFERENTIAL BUSH
11	51393-S0X-A02-BFS	LOW ARM BUSH (BIG)+1
12	52370-SWA-A01-BFS	SUSPENSION BUSH CRV 07-12
13	55470-EB300-BFS	DIFFERENTIAL BUSH
14	55476-EB30A-BFS	DIFFERENTIAL BUSH
15	48655-12170-BFS	LOW ARM BUSHING (BIG)+1
16	54570-1HJ0A-BFS	LOW ARM BUSHING (BIG)+1
17	54570-3DA2A-BFS	LOW ARM BUSHING (BIG)
18	48654-12120-BFS	LOW ARM BUSHING (SMALL)+2
19	48818-33050-BFS	STABILIZER SHAFT RUBBER (RE)+1
20	42304-05140-BFS	SUSPENSION BUSH+1
21	48725-22190-BFS	SUSPENSION BUSH (SMALL)
22	51393-SHJ-A02-BFS	LOW ARM BUSH (SMALL)
23	50880-SNA-A02/IE-BFS	ENGINE MOUNTING (RE,M/T)
24	50880-SNA-A82-BFS	ENGINE MOUNTING (RH)
25	B25D-39-070C-BFS	INSULATOR ENGINE (LH)
26	37511-50040-BFS	COUPLING KET
27	45202-65J00-BFS	LOW ARM (FR,LH)+1
28	45201-65J00-BFS	LOW ARM (FR,RH)+2
29	BET258 BYD-BFS	ENGINE BUSH
30	DG81-39-060-BFS	ENGINE MOUNTING (RH)
31	GJ6A-34-300-BFS	SUSPENSION ARM (FR,LW)
32	BBP3-39-070-BFS	ENGINE MOUNTING
33	DG81-39-040-BFS	ENGINE MOUNTING (FR)
34	48068-12290-BFS	CONTROL ARM
35	48069-12290-BFS	CONTROL ARM
36	BBM2-39-060-BFS	ENGINE MOUNTING (RH)
37	B25D-39-06YC-BFS	INSULATOR ENGINE (RH)
38	54500-1AA0A-S-BFS	LOW ARM BUSHING (SMALL)