

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



Sumar Auto Spare Parts Trading llc

S/N	Part No	Description
1	50830-TA0-A01-BFS	INSULATOR ENGINE (LH)
2	MR510056-BFS	ENGINE MOUNTING (FR,LH,RH)
3	12363-74120-BFS	ENGINE MOUNTING (RH,A/T)
4	50805-S5A-013-BFS	INSULATOR ENGINE (RH,A/M)s5a-003
5	50820-T2F-A01-BFS	ENGINE MOUNTING
6	54610-25000-BFS	SHOCK ABS MOUNTING (FR,LH,RH)
7	50820-T2F-A01-BFS	ENGINE MOUNTING
8	48068-33050-BFS	LOW ARM (FR,RH)+1
9	48702-52060-BFS	SUSPENSION BUSH
10	48610-59125-BFS	UP ARM BUSH (FR)LS460
11	48620-50070B-BFS	LOW ARM BUSHING CENTER (BIG) LS460
12	54584-2E000-BFS	LOW ARM BUSH (FR,BIG)
13	48725-48011-BFS	SUSPENSION BUSH
14	55130-4D000-BFS	SUSPENSION BUSH
15	54524-1CA0A-BFS	UP ARM BUSH
16	51350-SMA-030B-BFS	LOW ARM BUSH (BIG)
17	48655-12170-BFS	LOW ARM BUSHING (BIG)+1
18	48654-50055-BFS	LOW ARM BUSH (FR,SMALL)SET+2
19	50890-SNA-A81-SAS	ENGINE MOUNTING (RE,A/T)
20	50890-SNC-A91-BFS	ENGINE MOUNTING (RH)
21	50850-TA2-H02-SAS	Engine Moting A/C 2008 2.0 LH
22	51920-SAA-015-BFS	SHOCK ABS MOUNTING (FR)
23	51360-S5A-A03-BFS	LOW ARM (LH)
24	51350-S5A-A03-BFS	LOW ARM (RH)
25	51360-SNA-A03-BFS	LOW ARM (FR,LH)+2
26	51350-SNA-A03-BFS	LOW ARM (FR,RH)+1
27	48068-05080-BFS	CONTROL ARM
28	48069-05080-BFS	CONTROL ARM
29	48069-33050-BFS	LOW ARM (FR,LH)+2
30	48068-48040-BFS	LOW ARM (FR,RH)+1
31	48069-48040-BFS	LOW ARM (FR,LH)+2
32	48068-33060-BFS	CONTROL ARM
33	48069-33060-BFS	CONTROL ARM
34	48068-09110-BFS	LOW ARM (FR,RH)+1
35	48069-09110-BFS	LOW ARM (FR,LH)+2
36	48068-0D030-BFS	LOW ARM (FR,RH)+1
37	48069-0D030-BFS	LOW ARM (FR,LH)+2
38	54501-2F000-BFS	LOW ARM (FR,RH)+1
39	54500-2F000-BFS	LOW ARM (FR,LH)+2
40	21930-2E100-BFS	ENGINE MOUNTING
41	21930-2F110-BFS	INSULATOR ENGINE
42	21910-1G000-BFS	INSULATOR ENGINE
43	21910-2E300-BFS	INSULATOR ENGINE (FR,A/T)
44	21910-2H000-BFS	INSULATOR ENGINE (FR)
45	54610-2E200-BFS	SHOCK ABS MOUNTING (FR,LH,RH)

SUMAR AUTO SPARE PARTS TRADING (L.L.C.)

www.sumarauto.com

info@sumarauto.com



Sumar Auto Spare Parts Trading llc

46	54610-2F000-BFS	SHOCK ABS MOUNTING+1
47	21810-2T000-BFS	INSULATOR ENGINE
48	54611-1J000-BFS	SHOCK ABS MOUNTING
49	48780-42010-BFS	SUSPENSION BUSH (BIG)+2
50	1-04782683-BFS	STABILIZER SHAFT RUBBER+2
51	54570-1HJ0A-BFS	LOW ARM BUSHING (BIG)+1
52	48620-30300-BFS	Low Arm Bush (Small)
53	48770-30052-BFS	SUSPENSION BUSH
54	48706-52010-BFS	SUSPENSION BUSH
55	51350-SZA-A02-BFS	LOW ARM BUSHING (BIG)+2
56	50830-TA2-H01-SAS	INSULATOR ENGINE (LH)
57	50810-TA2-H01-SAS	INSULATOR ENGINE
58	50820-TA2-H01-SAS	INSULATOR ENGINE (RH,A/M)
59	50820-TA0-A01-BFS	INSULATOR ENGINE (FR)
60	50850-T6A-J01-BFS	ENGINE MOUNTING (LH)
61	50805-S5B-305-BFS	ENGINE MOUNTING (LH)
62	50820-SHJ-A03-BFS	ENGINE MOUNTING (RH)
63	50840-SAA-003-BFS	INSULATOR ENGINE (FR,M/T)
64	50890-T6A-J01-BFS	ENGINE MOUNTING (RE)
65	50890-T5A-003-BFS	ENGINE MOUNTING (RE)
66	50890-T4N-H81-BFS	ENGINE MOUNTING (RE)
67	50890-T9D-T02-BFS	ENGINE MOUNTING
68	50890-T5A-911-BFS	ENGINE MOUNTING
69	50850-STX-A03-BFS	ENGINE MOUNTING
70	50822-T9D-T02-BFS	ENGINE MOUNTING
71	50890-T7L-000-BFS	ENGINE MOUNTING
72	11350-4BA0A-BFS	ENGINE MOUNTING
73	11360-4BA0B-BFS	ENGINE MOUNTING
74	50850-T4N-H01-BFS	ENGINE MOUNTING (LH)
75	50850-T7J-003-BFS	ENGINE MOUNTING (LH)
76	11210-4BB0B-BFS	ENGINE MOUNTING (RH)
77	11210-4BA0A-BFS	ENGINE MOUNTING (RH)
78	11220-4BA0A-BFS	ENGINE MOUNTING
79	11220-4BB0A-BFS	ENGINE MOUNTING (LH)
80	50870-SEG-A03-BFS	ENGINE MOUNTING (LH)
81	50806-SHJ-A01-BFS	ENGINE MOUNTING (RH,
82	50860-SEP-A03-BFS	ENGINE MOUNTING (RH,
83	54611-2K000-BFS	SHOCK ABS MOUNTING (FR)
84	12305-37070-BFS	ENGINE MOUNTING (RH)+3
85	12372-37110-BFS	INSULATOR ENGINE (LH)+3
86	12371-0D231-BFS	INSULATOR ENGINE (RE,A/T,M/T)+1
87	12372-22060-BFS	INSULATOR ENGINE (LH)+1
88	68110950AB-BFS	ENGINE MOUNTING
89	50806-SHJ-A02-BFS	ENGINE MOUNTING (RE LH)